


What you will need:

☐ 22mm Spade Bit ☐ Ruler or Measuring Tape ☐ Square Drive Screwdriver

Positioning your DoorMag™:

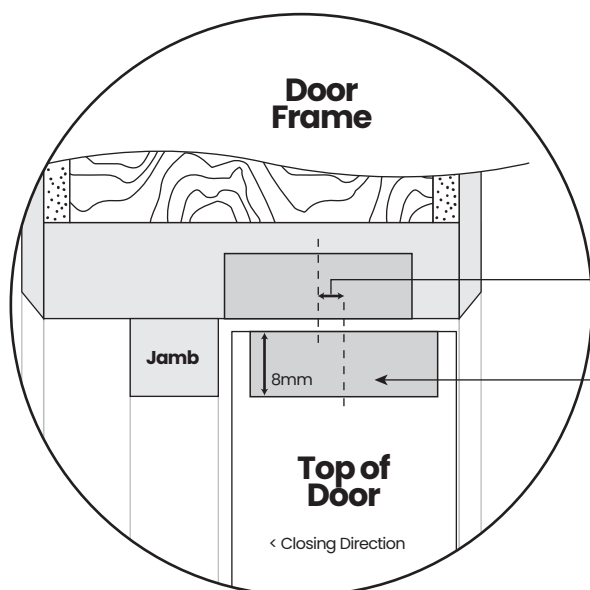

The DoorMag™ magnetic catch system is concealed within the top of your door, and also within the door frame.

Each half of the DoorMag™ set is attracted to each other, when installed they will need to be offset by 5mm, so they're always pulling toward each other.


Once you have marked the centres of your 22mm diameter holes, drill to an ideal depth of 8mm. *Ideally it is better to go slightly over 8mm rather than under to prevent the magnet poking out of the frame and door.*

5mm offset

Magnet pulls door toward door jamb.

22mm Diameter recess

Drill 8mm deep with a 22mm spade bit.

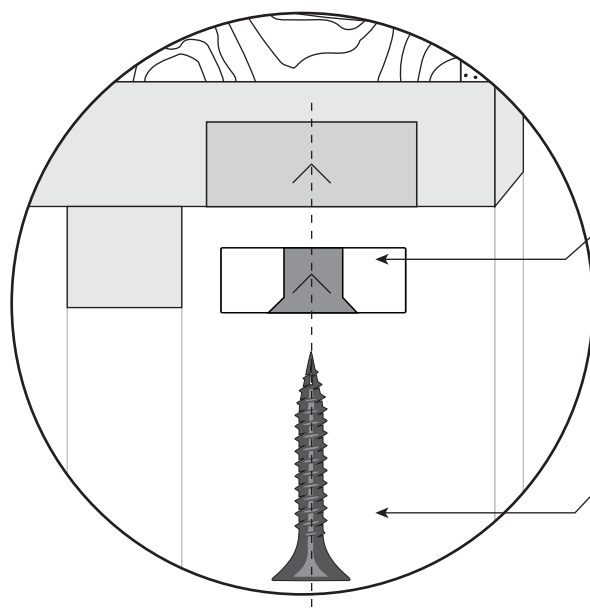

Installing the kit:

Repeat this process for both frame and door

Countersunk Magnet

Sits inside the casing with the countersunk side facing outward.

Square Drive

Secures the countersunk magnet and casing into the frame/door.

**DO NOT LET MAGNETS SNAP TOGETHER
OR BREAKAGE MAY OCCUR.**

Proudly made by

MAGNETS
NEW ZEALAND