


DoorMag™ Pro



What you will need:

- ☐ 24mm Spade Bit ☐ Ruler or Measuring Tape ☐ Square Drive Screwdriver

Positioning your DoorMag™ Pro:

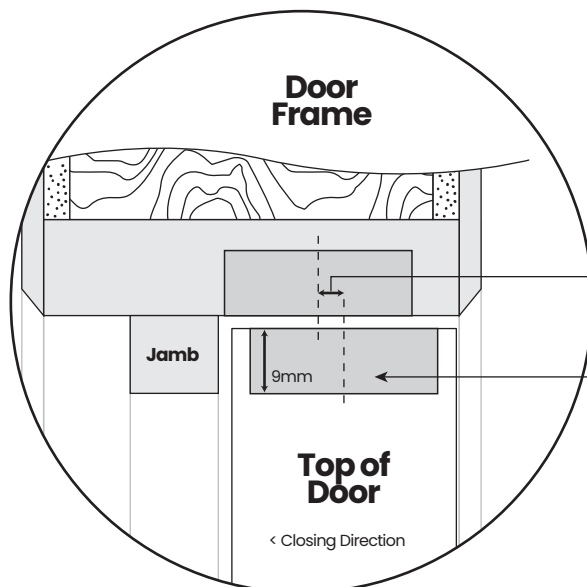

The DoorMag™ magnetic catch system is concealed within the top of your door, and also within the door frame.

Each half of the DoorMag™ set is attracted to each other, when installed they will need to be offset by 5mm, so they're always pulling toward each other.


Once you have marked the centres of your 24mm diameter holes, drill to an ideal depth of 9mm. *Ideally it is better to go slightly over 9mm rather than under to prevent the magnet poking out of the frame and door.*

5mm offset

Magnet pulls door toward door jamb.

24mm diameter recess

Drill 9mm deep with a 24mm spade bit.

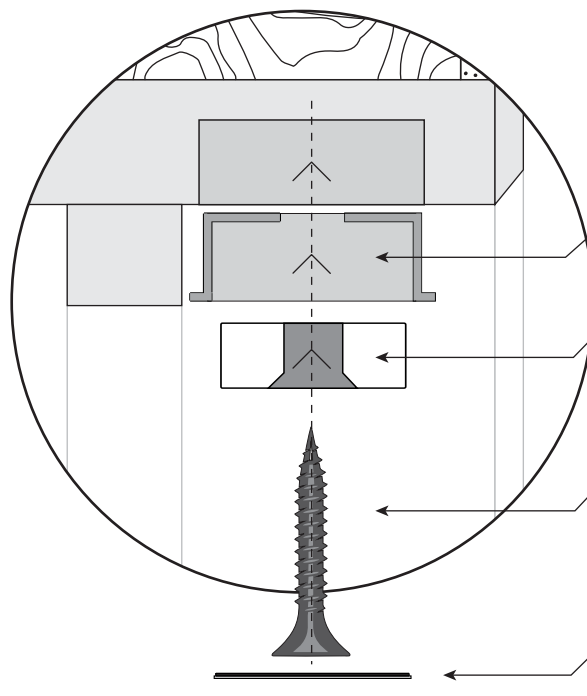

Installing the kit:

Repeat this process for both frame and door

Casing

Installed first.

Countersunk Magnet

Sits inside the casing with the countersunk side facing outward.

Square Drive

Secures the countersunk magnet and casing into the frame/door.

Stainless Cover

Peel and expose the adhesive, and adhere to the magnet. We recommend wiping down the magnet first to avoid oils and ensure a strong bond. Then remove the blue protective layer from the cover.

**DO NOT LET MAGNETS SNAP TOGETHER
OR BREAKAGE MAY OCCUR.**

Proudly made by

