

Installation Instructions


DoorMag™ Pro mini

Door
mag™
pro mini

What you will need:

☐ 15mm Spade Bit ☐ Ruler or Measuring Tape ☐ Square Drive Screwdriver

Positioning your DoorMag™ Pro mini:

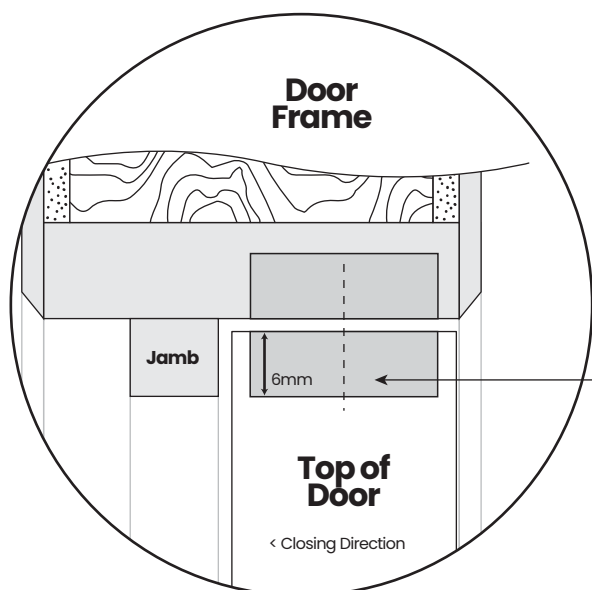


The DoorMag™ Magnetic catch system is concealed within the top of your cupboard door, and also within the cupboard frame.

Each half of the DoorMag™ set is attracted to each other. When installed they will always pull toward each other.

Once you have marked the centres of your 15mm diameter holes, drill to an ideal depth of 6mm. *Ideally it is better to go slightly over 6mm rather than under to prevent the magnet poking out of the frame and door.*

15mm Diameter recess
Drill 6mm deep with a 15mm spade bit

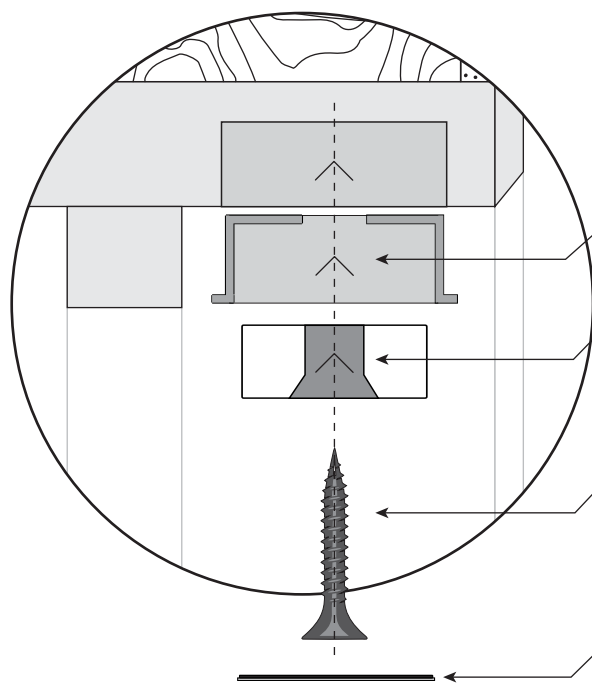

Installing the kit:

Repeat this process for both frame and door

Casing
Installed first.

Countersunk Magnet
Sits inside the casing with the countersunk side facing outward.

Square Drive
Secures the countersunk magnet and casing into the frame/door.

Stainless Cover
Peel and expose the adhesive, and adhere to the magnet. We recommend wiping down the magnet first to avoid oils and ensure a strong bond. Then remove the blue protective layer from the cover.

**DO NOT LET MAGNETS SNAP TOGETHER
OR BREAKAGE MAY OCCUR.**

Proudly made by

MAGNETS
NEW ZEALAND